

moxee[®]
tablet



 
Quick Start Guide

T-Mobile


P10000250

Device overview


- 1 Microphone
- 2 Power Key
- 3 Volume Key
- 4 SIM / SD Card Slot
- 5 Light Sensor
- 6 LED Indicator
- 7 Front Camera
- 8 Screen
- 9 Speaker
- 10 Rear Camera
- 11 USB Type C
- 12 Headset Connector

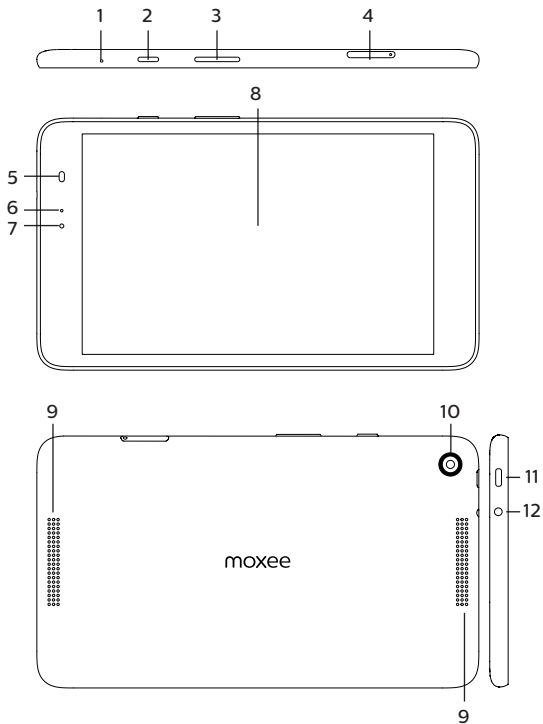

 Insert/Remove the Nano SIM and microSD Card

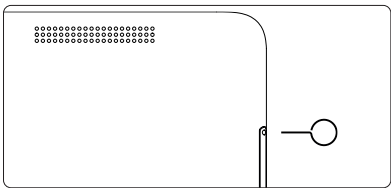

 1. Using ejector tool to open the SIM slot.

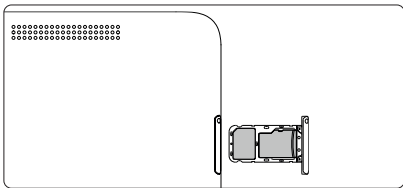

2. Insert/remove the SIM and microSD card.

Notes:

1. Your device only supports Nano SIM card (included). To avoid damage to your device, do not attempt to insert any other SIM types.
2. The microSD Cards are sold separately.

Charging

Before first use, the battery should be charged completely.

1. Insert the USB Type C charging cable into the USB charger port.
2. Plug the charging head into the power outlet.
3. Remove charging cable from the charger port when charging is complete.

Note: Please use the charging cable that came with the device. Using other charging cables may damage the battery or cause other hazards.

Battery

 
Device back cover and battery are non-removable. Attempting to remove either one it will invalidate the device warranty.

Power on your device

Long press the Power key until the device powers on. Unlock device screen by using Swipe, PIN, Password or Pattern if necessary. After unlocking the device, the Home screen will be displayed.

Power off your device

Long press the Power key until options popup and select Power off.

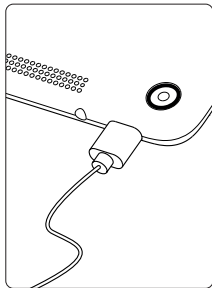


Home Screen

You can view and find all Apps, folders, and widgets on the Home screen.

Status Bar

 Check status icon, notification icon, and time and battery level on the status bar.

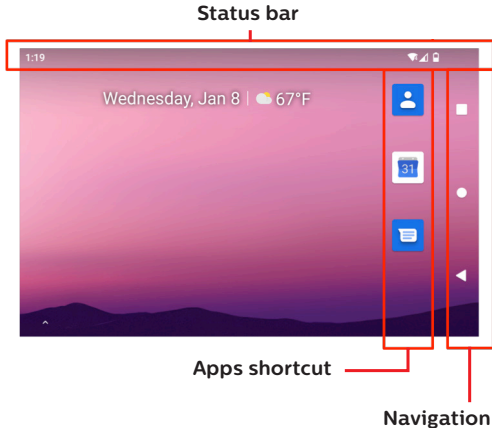

Status icons



Bluetooth enabled



Airplane mode



Wi-Fi connected



Alarm is set



Full network signal



Battery saver on



Roaming



Charging battery



Connected to 4G LTE



Battery full



Connected to 3G



New message

Editing Home screen

You can replace any installed app on your Home screen for easy access.

Add an App shortcut:

1. From the App list, choose the App that you want to move and hold it, drag the icon to the top of the screen then the Home screen should open.
2. Drag the icon to the location you want to place the App and drop it.

Remove an App shortcut:

Tap and hold the App icon you want to remove, drag the app to the X Remove on the top of the screen.

App List

To display App list, swipe up from the Home screen.


Screen Lock

There are several options to help you protect your device privacy:

Swipe up from the Home screen, tap Settings > Security > Screen lock to enter the options list to choose:

 
- **None:** Select to disable screen lock.
- **Swipe:** Select to enable slide unlock screen.
- **Pattern:** Select to draw a pattern to unlock screen.
- **PIN:** Select to set up numeric PIN to unlock screen.
- **Password:** Select to setup a password to unlock screen.

Browsing the Internet

Chrome is a simple and secure tool to browse the Internet. Tap **Chrome**  on the Home screen, and enter a term in the search bar or web address in the address field, then tap Q search icon.

Set Up Sound

1. Swipe up from the Home screen, tap **Settings > Sound**.
2. Position the slider to adjust volume for **Media**, **Alarm**, or **Notification** separately.
3. Set sound for **Notification** and **Alarm** separately.
4. Tap **Advanced** and expand options and select a named switch to turn its sound on or off.

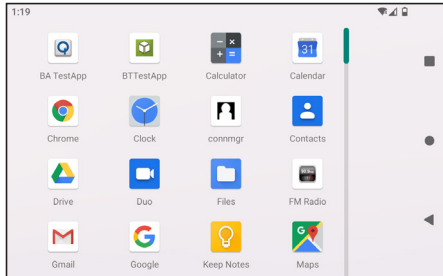

Wi-Fi Connection

1. Access the Internet through Wi-Fi network, go to Settings > Network & Internet > Wi-Fi.
2. Tap switch on / off to activate it, available network list will display.
3. Select the network that you want to connect to. Some networks are secure, you may need to enter the password to be able to connect.

Bluetooth

Connect your device with a Bluetooth headset or other Bluetooth device.

1. Go to Settings > Connected devices > Connection preferences > Bluetooth.
2. Tap to turn on Bluetooth.

View files on microSD card/internal storage



Manage and view files that are saved on your device, swipe up from Home screen to open the applications list, tap Files .

 
Note: microSD card is sold separately.

Camera






Using Camera app to take photos, selfies and video.

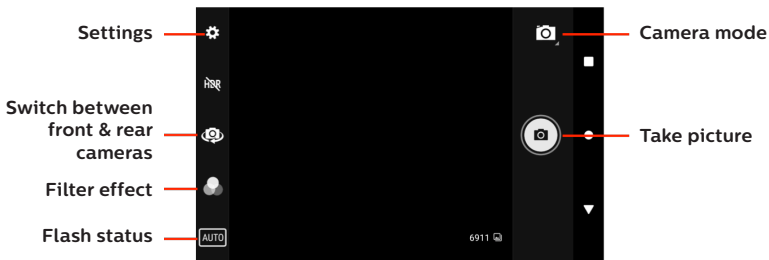
Taking pictures

1. Tap **Camera**  on the Home screen, tap screen to adjust focus for the different subject.
2. When ready to take picture, tap  .



Taking video

 1. Tap **Camera**  on the Home screen, tap **Video** icon  to enter video mode and start recording.
2. Tap **Pause**  to temporarily stop and **Resume**  to continue recording.
3. When finished recording, tap  to exit video mode.

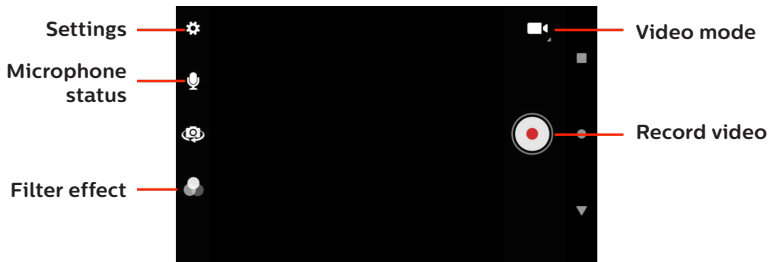

Legal

Approved firmware versions

This device will only operate with firmware versions that have been approved for use by T-Mobile and the device manufacturer. If unauthorized firmware is placed on the device it will not function.

Information about safeguarding handsets

T-Mobile encourages customers to take appropriate measures to secure their handsets and invites them to take advantage of the features available on this handset to help secure it from theft and/or other unauthorized access and use. This handset has a locking function (e.g., user-defined codes or patterns) that can serve as a first line of defense against unauthorized use or access to stored information. Preloaded security applications that allow customers to track or locate misplaced devices can be found on several T-Mobile devices. Lost or stolen devices should be immediately reported to T-Mobile so that proper measures can be taken to protect accounts. For additional information, visit: T-Mobile.com/devicsecurity and www.t-mobile.com/responsibility/privacy/privacy-choice/protecting-your-privacy.

Additional information

Use may require qualifying service, or access to a Wi-Fi connection.

Device and screen images simulated. **Coverage** not available in some areas. See **Terms and Conditions (including arbitration provision)** at T-Mobile.com, for rate plan information, charges for features and services, and restrictions and details. T-Mobile and the magenta color are registered trademarks of Deutsche Telekom A.G.

Safety

General Guidelines

- Electrical equipment may be susceptible to electromagnetic interference. Position the device away from electronic equipment to avoid potential interference.
- Consult a medical physician prior to using the device near any medical devices which may be affected, such as hearing aids and pacemakers.
- Do not use your device where there are explosive gases or explosive products being processed.
- Aftermarket accessories may affect device performance or device stability and may increase the probability of personal injury.
- Do not attempt to disassemble the device. There are no interchangeable parts in the casing. Any changes to the device could void the manufacturer's warranty.
- Do not allow the device or accessories to come into contact with, or submerge in, liquid or moisture at any time.
- Do not place objects on top of the device.
- Do not expose the device to direct sunlight, store it in hot areas or otherwise overheat the device as high temperature can reduce the life expectancy of the device.
- Children should be supervised and taught to use the device appropriately.
- Use an antistatic cloth to clean the device. Do not use chemical or abrasive cleansers or risk of damage to the casing may occur.

Use the device within the listed environmental ranges:

- Temperature range of 0°C ~ +50°C
 - Storage temperature range -20°C ~ +60°C
 - Humidity range 20% ~80%.
- Do not place the device alongside item affected by magnetic fields such as credit cards, disk drives or other magnetic media.

- Do not paint the device.
- Do not drop, throw, or subject the device to other physical trauma.
- Stay Eco-friendly. Recycle the packaging of your device after installation.
- Consult with the facility on any questions regarding the use of this device on hospital grounds.

Road Safety

- Do not use the device or any mobile devices while operating a vehicle.
- Do not store or carry flammable or explosive materials in the same compartment as the device.
- Airbag deploys with extreme force. Do not place any objects in the area over the airbag or in the airbag deployment area. If any item is improperly installed in the airbag deployment path while the airbag is jettisoned, serious injury could result.

Third Party Equipment

The use of third-party equipment, cables or accessories, not made or authorized by KonnectONE, may invalidate the warranty of the device and also adversely affect the device performance and stability.

Efficient Use

For optimum performance with minimum power consumption, do not cover the device with anything. Covering the device may cause damage by operating at higher power levels than recommended.

California Proposition 65 Warning

The device includes batteries, circuit boards and other materials that can expose you to chemicals including cobalt lithium nickel oxide, and nickel, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

RF Exposure Information (SAR)

This device meets the FCC's requirements for exposure to radio waves. This device is a Class B digital device, pursuant to part 15 of the FCC Rules designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

Operation is subject to the following two conditions: (1) the device does not cause harmful interference, and (2) this device accepts any interference received, including interference that may cause undesired operation.

The FCC has granted an Equipment Authorization for this device with all reported Specific Absorption Rate ("SAR") levels evaluated in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: 2APQU-MT-T800.

The highest SAR value for this device as reported to the FCC when tested for use in body is **x.xx W/Kg** and **x.xx W/Kg** for extremity mode. While there may be differences between the SAR levels of various devices at various positions, they all meet the government requirement.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority from the FCC to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

CTIA Compliance

- a) Do not disassemble or open crush, bend or deform, puncture or shred.
- b) Do not modify or remanufacture. Attempt to insert foreign objects in to the battery, immerse or expose to water or other liquids expose to fire, explosion or another hazard.
- c) Only use the battery for the system for which it is specified.
- d) Only use or replace the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or another hazard.
- e) Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- f) Promptly dispose of used batteries in accordance with local regulations.
- g) Battery usage by children should be supervised.
- h) If the device or battery is dropped and the user suspects damage, take it to a service center for inspection.
- i) Improper battery use may result in a fire, explosion or other hazard.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you should: Reorient or relocate the receiving antenna; Increase the separation between the equipment and receiver; Connect the equipment into an outlet on a circuit different from that to which the receiver is connected; and/or Consult the dealer or an experienced radio/ TV technician for help.

Consumer Limited Warranty

KonnectONE offers you a limited warranty that the enclosed device(s) (the "Product") will be free from defects in material and workmanship for a period that expires one year from the date of sale of the Product to you, provided that you are the original end-user purchaser of the Product and that your purchase was made from a supplier authorized by the KonnectONE. Transfer or resale of a Product will automatically terminate warranty coverage with respect to that Product. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. This limited warranty is applicable only to end users in the United States.

KonnectONE will, at its sole and absolute discretion, either repair or replace a Product (for which KonnectONE may use refurbished parts of similar quality and functionality) if found by KonnectONE to be defective in material or workmanship, or if KonnectONE determines that it is unable to repair or replace such Product, KonnectONE will refund the purchase price for such Product, provided that the subject Product (i) is returned to a KonnectONE authorized service center within the one-year warranty period, and (ii) is accompanied by a proof of purchase in the form of a bill of sale or receipted invoice which evidences that the subject Product is within the one-year warranty period. After the one-year warranty period: you must pay all shipping, parts and labor charges incurred to repair or replace your Product, provided that if the Product is deemed un-repairable or has been removed from the list of products supported by the KonnectONE, you will only be liable for shipping and labor charges. This limited warranty does not cover and is void with respect to the following: (i) any Product which has been improperly installed, repaired, maintained or modified; (ii) any Product which has been subjected to misuse (including any Product used in conjunction with hardware electrically or mechanically incompatible or used with accessories not approved by KonnectONE), abuse, accident, physical damage, abnormal operation, improper handling, neglect, exposure to fire or liquid; (iii) any Product operated outside published maximum ratings; (iv) cosmetic damage; (v) any Product on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) cost of installation, removal or reinstallation; (vii) signal reception problems (unless caused by defects in material and workmanship); (viii) damage as a result of fire, flood, acts of God or other acts which are not the fault of KonnectONE and which the Product is not specified to tolerate, including damage caused by mishandling and shipping; (ix) consumables (such as batteries); or (x) any Product which has been opened, repaired, modified or altered by anyone other than KonnectONE or a KonnectONE authorized service center.

USE ONLY KONNECTONE APPROVED ACCESSORIES WITH KONNECTONE PRODUCTS. USE OF ANY UNAUTHORIZED ACCESSORIES MAY BE DANGEROUS AND WILL INVALIDATE THE PRODUCT WARRANTY IF SAID ACCESSORIES CAUSE DAMAGE OR A DEFECT TO THE PRODUCT.

EXCEPT AS EXPRESSLY PROVIDED ABOVE, THE PRODUCT, ASSOCIATED SOFTWARE, ASSOCIATED SERVICES AND RELATED CONTENT ARE PROVIDED "AS IS" WITHOUT WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY YOU FROM KONNECTONE OR THROUGH THE PRODUCT OR ITS ASSOCIATED SOFTWARE AND SERVICES WILL CREATE ANY WARRANTY NOT EXPRESSLY STATED HEREIN. WHILE KONNECTONE ATTEMPTS TO PROVIDE A GOOD USER EXPERIENCE, WE CANNOT AND DO NOT REPRESENT OR WARRANT THAT THE PRODUCT WILL ALWAYS BE SECURE OR ERROR-FREE, THAT THE PRODUCT WILL ALWAYS FUNCTION WITHOUT DELAYS, DISRUPTIONS, OR IMPERFECTIONS, OR THAT THE ASSOCIATED SOFTWARE AND SERVICES WILL BE AVAILABLE AT ANY PARTICULAR TIME OR LOCATION; THAT ANY DEFECTS OR ERRORS WILL BE CORRECTED, THAT THE PRODUCT OR ANY ASSOCIATED CONTENT ARE ACCURATE, COMPLETE, RELIABLE OR CURRENT, OR THAT THE PRODUCT OR ANY ASSOCIATED CONTENT ARE FREE OF VIRUSES OR OTHER HARMFUL COMPONENTS.

KONNECTONE SPECIFICALLY DISCLAIMS LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, PUNITIVE, EXEMPLARY, AGGRAVATED, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, WHETHER FORESEEABLE OR UNFORESEEABLE OF ANY KIND WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS OR CONTRIBUTION OR INDEMNITY IN RESPECT OF ANY CLAIM RELATED TO A PRODUCT. REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT OR REFUND OF THE PURCHASE PRICE RELATING TO A DEFECTIVE PRODUCT, AS PROVIDED UNDER THIS WARRANTY, ARE YOUR SOLE AND EXCLUSIVE REMEDIES FOR BREACH OF THE LIMITED WARRANTY, AND SUBJECT TO THIS WARRANTY, THE PRODUCTS ARE APPROVED AND ACCEPTED BY YOU "AS IS".

Copyright ©2020 KonnectONE, LLC. All rights reserved.

The manual is published by KonnectONE, LLC ("KI"). We reserve the right to make modifications on print errors or update specifications without prior notice.

T-Mobile®