



OnePlus Nord N300 5G User Manual

Due to software updates, your experience of the software interface (including but not limited to software features, user interfaces, and interaction experiences) may differ from the interface presented in this manual. The software interface is subject to change.

Table of contents

GETTING STARTED	4
FRONT & BACK VIEW	4
SETTING UP YOUR DEVICE	5
BATTERY AND CHARGING	6
PHYSICAL BUTTONS	7
TRANSFER DATA TO ONEPLUS DEVICE	9
THE BASICS	11
BASIC GESTURES	11
INSTALL AND UNINSTALL APPS	12
USE APPS	13
HOME SCREEN	14
HOME SETTINGS	16
NOTIFICATION	17
GOOGLE ASSISTANT	20
SETTINGS	21
MOBILE NETWORK	21
WI-FI	22
BLUETOOTH	24
CONNECTION & SHARING	24
USB TETHERING	25
BLUETOOTH TETHERING	26
NFC	26
SCREENCAST	27
PRINT	28
VPN	28
PRIVATE DNS	28
ANDROID AUTO	29
PERSONALIZATIONS	29
DISPLAY SETTINGS	ERROR! BOOKMARK NOT DEFINED.
HOME SCREEN & LOCK SCREEN	ERROR! BOOKMARK NOT DEFINED.
DISPLAY & BRIGHTNESS	32
SOUND & VIBRATION	34


NOTIFICATIONS & STATUS BAR	37
MANAGE NOTIFICATIONS.....	ERROR! BOOKMARK NOT DEFINED.
PASSWORD & SECURITY.....	39
PRIVACY	41
SAFETY & EMERGENCY.....	45
BATTERY.....	46
APPS	47
LOCATION	49
DIGITAL WELLBEING & PARENTAL CONTROLS.....	50
SYSTEM SETTINGS	52
USERS & ACCOUNTS.....	60
ABOUT DEVICE	60
GOOGLE	62
MANAGE YOUR GOOGLE ACCOUNT.....	62
TIPS & SUPPORT	62
APPS.....	63
PHONE	63
CONTACTS	64
MY FILES	65
MESSAGES.....	66
WEATHER.....	67
CALCULATOR.....	68
RECORDER.....	69
NOTES.....	69
PHOTOS	70
CLOCK.....	71
ZEN MODE	73
CLONE PHONE.....	ERROR! BOOKMARK NOT DEFINED.
GOOGLE APPS	74
PLAY STORE.....	76
ADVANCED.....	ERROR! BOOKMARK NOT DEFINED.
GAMING MODE.....	ERROR! BOOKMARK NOT DEFINED.
REBOOT, UPDATE, BACKUP, RECOVERY	76
REBOOT OR FORCE REBOOT	76

SYSTEM UPDATES.....	76
BACK UP AND RESET	77
FACTORY RESET.....	ERROR! BOOKMARK NOT DEFINED.
ACCESSIBILITY.....	79
PRESS POWER BUTTON TO END CALLS.....	79
MAGNIFICATION.....	79
COLOR INVERSION	80
HIGH CONTRAST TEXT	80
SAFETY INFORMATION	81
PRECAUTIONS FOR USING THE DEVICE.....	83
FCC NOTICE.....	93
CARE AND MAINTENANCE	101
ONEPLUS DEVICE WARRANTY INFORMATION	102
THE LIMITED WARRANTY DOES NOT COVER	103
RETURN POLICY (LIMITED TO EUROPE).....	105

Getting started

Learn more about your device and start using.

Front & Back View

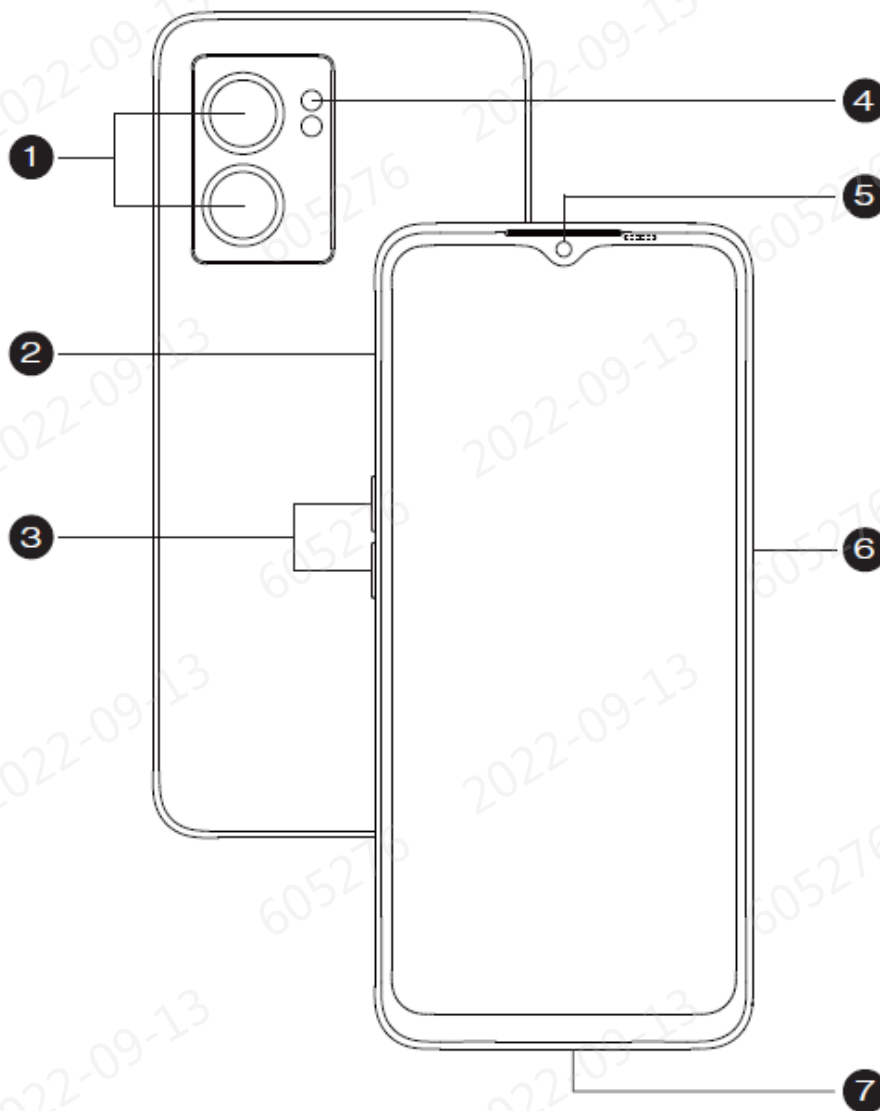

- ❶ Rear Camera
- ❷ SIM Tray
- ❸ Volume buttons
- ❹ Flash

- ❺ Front Camera
- ❻ Power button & Fingerprint sensor
- ❼ USB Port

Setting up your device

Insert SIM card

1. Insert the SIM Tray Ejector into the small hole on the SIM card holder. Press the ejector firmly into the hole to push the SIM card tray out.
 2. Slowly pull the SIM card tray out of the tray slot.
 3. Place the SIM card into the SIM card tray.
 4. Plug the SIM card tray back into your device.
- * Use the original Nano-SIM card. Non-original cards may cause damage.

Booting up your OnePlus device

Press and hold the **power** button for a few seconds to boot up the phone. If your phone does not power on, you may need to charge it.

Setup Wizard

When you first boot up the phone (or after a factory reset), the **Setup Wizard** lets you customize all features, including language, software buttons, gestures, fingerprint unlock, and other features.

If you want to change these later, you can do so after setting up the phone in the Settings app.

Battery and charging

You will need to charge the phone when you first get it or if you have not used it for a long time.

Safety Information:

1. To ensure your safety and avoid damaging the device, only use the official charger and USB cable.
2. OnePlus device supports the USB Type-C cable.
3. Unplug the charger after you finish charging to avoid wasting electricity.
4. Do not place anything on your phone while it is charging.

Charge the battery

1. Connect the USB cable to the adapter;
2. Plug the USB cable into the phone's USB port.
3. Plug the adapter into a power socket.
4. After charging, unplug the USB cable from the phone and unplug the adapter from the socket.

Save power and extend battery life

Reduce power consumption by doing the following:

1. Turn off the screen when the device is not in use.
2. Turn on **Battery Saver** mode when the battery is low.
3. Disable Bluetooth and Wi-Fi when you are not using them.
4. Dim screen brightness and shorten sleep time in Settings.
5. Delete apps that you do not use.

Supper VOOC 33W

When you use the OnePlus charger and USB cable for charging, you can charge your phone safely (11V/3A) and quickly.

It is recommended to use between 15°C and 35°C degrees.

Physical buttons

Power button

The power button is located on the right side of the phone.

- Press and hold the power button to turn on the device when the device is off.
- Press and hold the power button for Google assist when the device is on.
- Press the power button and volume up button simultaneously for Emergency/Power off/Restart when the device is on.

- Click the power button to turn on the screen.

Volume button

The volume button is located on the left side of the phone.

- When playing music or video, press the volume button to adjust the media volume.
- Press the volume button during a call to adjust the call volume.
- Press the volume button to silence the ringtone when you get an incoming call.

Shortcut keys

You can perform quick actions using the shortcut keys.

- Press and hold the power button and volume up button simultaneously to turn off the device.
- Press and hold the power button and volume down button simultaneously to take a screenshot.
- Press and hold the power button and volume down button simultaneously to access recovery mode when the device is powered off.
- Long press the power button and volume up for 10 seconds to force a power off.

Transfer data to OnePlus device

Clone phone can quickly transfer all your data, including contacts, messages and photos, from your old device to your new OnePlus device.

If your old device is OnePlus Switch, you will need scan the new QR code to download the Clone Phone.

If the old device is OnePlus or other Android devices:

1. Open the Clone phone. Select **I'm a new phone**, then select your old phone's type.

Follow the prompts on the new phone screen. Download and install Clone phone on your old phone.

2. Tap Continue on your new phone.
3. Open Clone phone in your old phone, select I'm an old phone, and scan the QR code on your new phone to connect the two phones.
4. After connecting the two phones, select the data you want to migrate from your old phone. Tap to start. Then wait until the transfer is completed.

If the old device is iPhone:

1. Sync the data of your iOS device to iCloud.
2. Open Clone phone app.
3. Choose **I'm a new phone** and then tap on **"iPhone"**.

4. Sign in to your iCloud account and start importing data.
5. It's recommended to complete the whole data transfer process while connected to a Wi-Fi network, and Clone phone should always stay on the screen. If you ever get disconnected from the iCloud server, please try logging into iCloud again and pick up with the data transmission. Please note that only certain format of data can be transferred due to compatibility issues.

The Basics

Learn to use your OnePlus device.

Basic gestures

Learn to use basic gestures, such as tap, drag, swipe, and zoom, to control your phone and apps.

1. Tap to enter the app or select it.



2. When viewing a webpage or list, swipe up or down to scroll.



3. Swipe left or right with your finger to switch tabs, change pages or slide content in the weather/calendar/gallery/app list.



4. Two-finger zoom for images.



5. Press and hold the screen to bring up the pop-up window for advanced settings or to enter edit status.



Install and uninstall apps

Install apps from Play Store

It is advisable to download and install apps from Play Store, which is available on your device.

Open Play Store to search for apps using key words or on screen.

- Tap the app icon to view application details.
- Tap **Install** to download and install apps.
 - * It is advisable to download apps on a Wi-Fi network.
 - * New upgradation of apps that you download would be reminded. (Choose yes/no)

Uninstall apps

Uninstall apps as follows:

- On the home screen or app drawer, press and hold the app icon and select uninstall.
- Go to Play Store > Manage app & advice > Manage > uninstalled, click to enter the app details, select uninstall.
- Go to Settings > App management > App list and select the app. Then go to App info and select uninstall.

* Some pre-installed apps cannot be uninstalled.

Use Apps

Learn how to open apps, switch between apps, close apps and view app information.

App drawer

Swipe up on the home screen to view all your apps in the app drawer

Open apps

Open the app by the app icon on the desktop or in the app drawer.

View app info

Long press an app's icon and select app info in the pop-up box to view app info and setting options.

Switch apps

- In **Navigation gestures**, swipe left or right along the bottom bar to switch between apps.
- In **Back, Home, Recents**, tap **Recents** button in the navigation bar to switch between apps.

Close apps

- In **Navigation gestures**, swipe up from the bottom edge of the screen and pause, then close apps by swiping up on the app card.
- Tap **Recent** button and close apps by swiping up on the app card.

Clear background tasks

- In **Navigation gestures**, swipe up from the bottom edge of the screen and pause, then tap “Clear All” to clear background tasks.
- Tap **Recents** button to enter the recent apps list, then tap “Clear All” to clear background tasks.

* Pinned apps will not be closed.

Lock background apps

In the recent apps list, tap the more (three dots) button in the upper right corner of the app card to access the menu options. Select Lock to prevent the application from being closed or cleared.

Home screen

Learn to set **wallpapers**, Wallpapers, Icons, Widgets, layout, Transitions and More to personalize your phone.

Wallpapers

Long press a blank space on the home screen and select **WALLPAPERS** to set your home screen wallpaper and lock screen wallpaper.

Icons

Long press a blank space on the home screen and select **ICONS** to set up icon styles for preset apps and some third-party apps.

Widgets

Long press on a blank space from the home screen and select **Widgets** to press a widget and drag it to the home screen.

Layout

Long press a blank space on the home screen and select **Layout** to adjust the number of desktop grids.

Transitions

Long press a blank space on the home screen and select **Transitions** to select a transition animation effect.

More

Long press a blank space on the home screen and select **More** to Home Screen and Lock Screen

Home Screen and Lock Screen

Long press the blank space on the home screen and select **MORE** to enter it.

Home Screen Mode: select Standard mode or Drawer mode.

Home screen layout: Adjust the number of desktop layout.

Lock Home Screen: When enabled, Home screen layout is locked and cannot be changed.

Icon autofill: App icon will autofill.

Icon pull-down gesture: Open apps on the home screen with one hand.

Double tap to lock: Double tap on the blank area of the Home screen to turn the screen off and lock the device.

Swipe down on home screen: Chose to notification drawer or Global search.

App animation speed: Adjust the speed of app startup and closing animations.

Show app suggestions: When enabled, phone will show app suggestions.

Add apps to Home Screen: When enabled, newly download apps will be added to the home screen.


Raise to wake: When enabled, phone will raise to wake.

Double-tap to wake or turn off screen: When enabled, phone will support double-tap to wake or turn off screen.

Lock screen shortcuts: Swipe on the shortcuts at bottom of the Lock screen to open app or feature.

Recent tasks manager

Notification

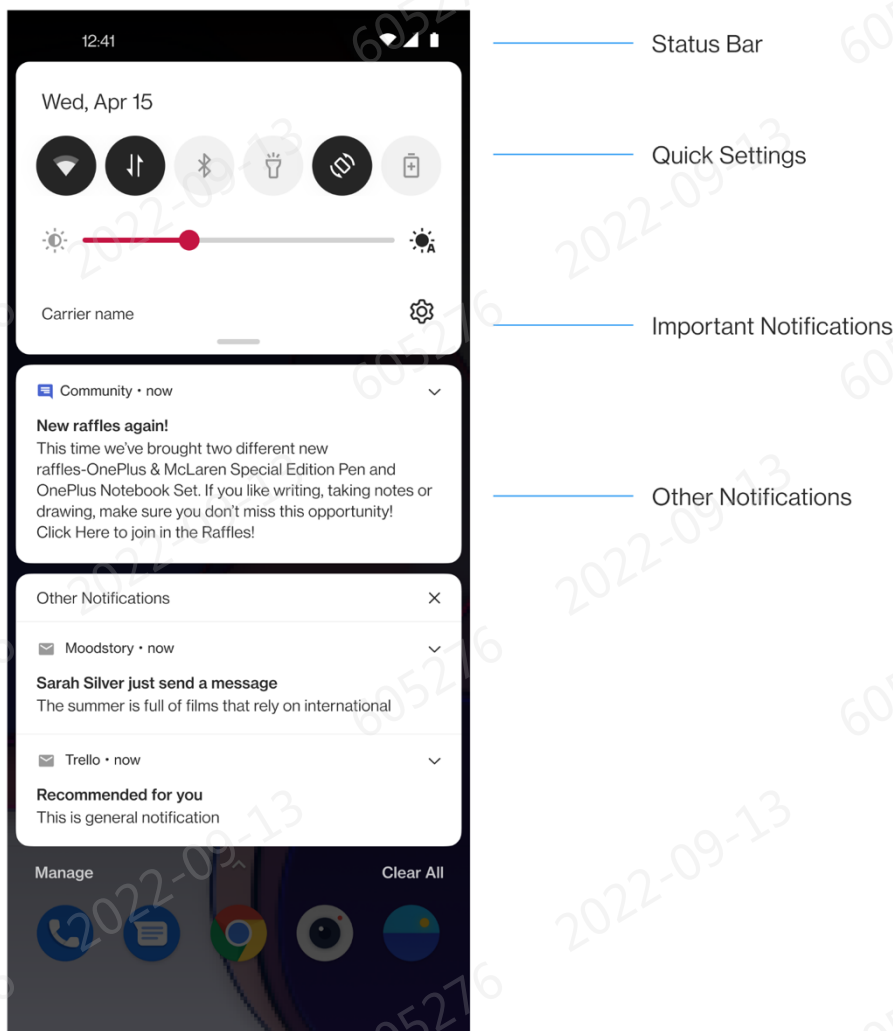

When a new system notification or app notification is received, the status bar will display the corresponding icon. Pull down the

notification panel by swiping down from the top of the application page or anywhere on the home screen except for the right top corner which will enter into shelf page.

- You can clear a notification by swiping it right (Some notifications need to be cleared by closing the related app).
- **Long press** a notification to enter the notification settings for that app.






















There are two categories: “Important” and “Other” , you can choose to move less important notification to the “**Other notifications**” category, by pressing the notification and choose “**Other**” .

Quick Settings

- Tap the quick settings icon to turn on/off specific functions quickly.
- Press and hold an icon in the quick settings menu to open the corresponding settings interface.
- Swipe down again to view more buttons and brightness settings.

Status icons

Status icons are displayed on the status bar at the top of the screen. The icons listed in the table below are the most common ones.

	Signal strength		Location service enabled
	Wi-Fi		Alarm enabled
	No SIM card		Silent mode enabled
	Connected to GPRS network		Vibration mode enabled
	Connected to UMTS network		Airplane mode enabled
	Connected to HSDPA network		Normal charging
	Connected to HSPA+ network		Battery capacity
	Connected to LTE network		NFC enabled
	Connected to 5G network		Gaming mode enabled
	Bluetooth enabled		Do not disturb enabled
	Wi-Fi hotspot enabled		

Google assistant

* When using Google assistant for the first time, follow the prompts to log in to your Google account.

You can quickly access Google Assistant, by either pressing and holding down your home button, swiping up from the corner of the phone screen (if you have enabled **“Navigation gestures”**), or by press the power button, or by simply saying, "Hey Google."

With Google Assistant, you can:

- Make quick phone calls on the go (e.g., "Call Mom")
- Send text messages (e.g., "Text Sara I am running late")
- Set reminders (e.g., "Remind me to buy a birthday gift for John")
- Take a selfie (e.g., "Take a selfie")
- Set calendar events (e.g., "Set a calendar event for dinner with Charlie tomorrow from 7-9")
- Play music (e.g., "Play jazz music on YouTube")
- Navigate to places (e.g., "Give me Home directions ")
- Weather information (e.g., "Do I need an umbrella today?")

Settings

Configure your phone's network and account or set up your phone

Mobile network

Enable or disable mobile data

Go to **Settings > Mobile network**, enable/disable **Mobile data**.

General settings

When you insert the SIM card, you can use the internet when making calls.

Data usage

You can check statistics on the mobile data and Wi-Fi traffic usage.

Network settings

Go to Settings > Mobile network > Data usage, turn on or off the network.

- **Network access:** You can set up different ways of using the network including Wi-Fi & mobile data, Only Wi-Fi, Only Mobile Data and Disable network, when you use different apps.

- **Data usage limit:** You can set the allowed data usage for a day or a month
- **Data saving:** When the option is turned on, apps in the background will not be able to use mobile data, whereas apps in the foreground will decide which data-saving measures to take. In addition, network tethering will be unavailable and the status bar will display the data-saving icon.
- **Advanced settings:** From bottom 'You might be looking for :Call settings' to enter advanced settings.

Wi-Fi

Connect to the internet through Wi-Fi.

Connect to Wi-Fi

1. Enter **Settings** > **Wi-Fi**, tap **Wi-Fi**.
2. Select a Wi-Fi network from the list.
3. You will automatically connect to an unencrypted Wi-Fi network that you have selected. To connect to an encrypted network, enter the password and tap **CONNECT**.

* You can also manually add a Wi-Fi network by selecting **Add networks**.

Wi-Fi Assistant

Auto connect to the best WI-FI: When the option is turned on, the system will: Auto connect to the best Wi-Fi and auto switch to mobile network when the quality of Wi-Fi networks is poor.

Auto switch to mobile network: When enabled, automatically switch to the mobile network when Wi-Fi networks are slow.

Dual channel acceleration: Connect to Wi-Fi and the mobile network at the same time for a faster internet connection

Advanced settings

Click on the more (three dots) button in the upper right corner to access advanced settings

Install certificates: Browse files in other apps (recent files)

Wi-Fi status display: Turn on or off the Bandwidth label, the number will be presented. Adjusting Wi-Fi status display will not affect Wi-Fi functionality.

Wi-Fi data usage: You can view your Wi-Fi data usage here, including the total data usage and the data usage of different apps.

Passpoint: Turn on to discover Wi-Fi networks that support the Passpoint protocols.

Wi-Fi Direct

Wi-Fi INFO: Show the MAC address and IP address

Bluetooth

Bluetooth lets you connect to Bluetooth-enabled devices such as headsets and keyboards.

- Go to Settings > Bluetooth, select the device you want to connect from the list of available devices, and enter the pairing code to complete pairing.

* When your Bluetooth device is turned on but cannot be found, check the device's manual and follow the instructions to switch the device to pairing mode to connect.

Advanced settings:

You must make sure that the option **Visible to Other Devices** is turned on so that others can find and pair with your devices.

Media volume sync: When the option is turned on, volume on Bluetooth devices and your phone will be synced.

Display codec standard: Display the current codec standards for paired devices.

Connection & sharing

Share Mobile hotspot and screencasts.

Airplane mode

After switching your device to airplane mode, you will not be able to dial, but you can read, play games, watch videos, or use other applications that don't require network or phone connections.

Mobile hotspot

Share your mobile data or Wi-Fi connection with other devices. This may consume more mobile data and battery power.

* Two ways of linking Mobile hotspots will be provided:

1. QR code: Scan the QR code and connect to this Wi-Fi network.

2. Mobile hotspot password: Go to Mobile hotspot settings > change the Name and Password.

● **Mobile hotspot settings** : Set Mobile hotspot name and password.

* You must make sure that the option **Broadcast network name(SSID)** is turned on so that this hotspot can be connected manually.

● **Connection management** : The maximum allowed connections and the data restriction can be set.

● **Turn off Mobile Hotspot automatically**: when no devices are connected for 10 minutes.

USB tethering

To share your device's mobile data or Wi-Fi network with your computer via USB, follow the steps below:

1. Connect your phone to your computer with a USB cable
2. Select the USB connection method as **USB tethering** in the control center.

* Some computers may need Android RNDIS driver to be installed separately.

Bluetooth tethering

To share your device's mobile data or Wi-Fi network with other devices by BLUETOOTH tethering, follow the steps below.

1. Go to Settings > **Connection & sharing** > enable **Bluetooth tethering**.
2. Pair and connect your phone in the Bluetooth settings interface of other devices.

NFC

When NFC is enabled, you can exchange data with another device when the two devices are touching.

Tap & pay

Go to **Settings > Connection & sharing> switch on NFC > Tap & pay**

After the default payment app is set, you can make payment by tapping the back of your phone on a device with a payment logo, for example, a POS machine, subway gate, transportation payment terminal.

*Before using the Tap and pay, you need to set up the default payment app, open the payment service in the app, and set the tap and pay feature with the following settings options:

- **Payment default:** Choose an app, such as Google pay, to use when making a payment by tapping the payment terminal.
- **Use default:** You can set as **Always** and **Except when another payment app is open.**

Screenecast

Make sure your phone and the display device are connected to the same network or that the display device has the wireless display function turned on. Pair your phone with the display device to stream your phone screen to it.

Before using the Miracast function, ensure that your TV, projector, screen and other display devices are compatible with the Miracast function, and the function of the device is turned on.

Instructions:

1. Go to **Settings > Connection & sharing > Screencast**

2. Tap the menu button **Screencast**.

3. Select the display device that needs to be projected and wait for the phone screen to be projected onto the display device.

Print

The Print service lets you print documents, images, emails, and web pages. An option for the Print service appears when you choose to share a file.

When **Default Print service** and **Quick device connect** on, the device will search for nearby printers quickly, you can choose and connect to the printer for print services.

*Add print service: Add a new print service for printing works.

VPN

Go to Settings > Connection and Sharing > VPN. Then, click "+", adding VPN after completing the VPN name, type, server address and other information.

Private DNS

Private DNS is a mechanism to achieve encrypted transfer. Once connected it helps to enhance network security. However, it may also lead to network latency and connection failure. Please pay attention to your network connection after selecting "Designated

Private DNS” .

Android Auto

Allow you to use apps on your car screen.

Quick device connect

Discover and connect to your nearby devices quickly

Personalizations

Go to **Settings** > **Personalizations** to customize your phone.

You can change the Wallpapers, ICONS, Quick settings , Colors, Font & display size here.

Wallpapers

You can use the wallpaper provided by OnePlus, or you can use a personal photo as your wallpaper.

Icons

Customize the status icon shape

Quick settings

Select shape for system Icon

Colors

Click the color you want and save to change the accent color.

Font & display size

Select font size and display size here

Home Screen and Lock Screen

Long press the blank space on the home screen and select **MORE** to enter it.

Home Screen Mode

select Standard mode or Drawer mode.

Home screen layout

Adjust the number of desktop layout.

Lock Home Screen layout

When enabled, Home screen layout is locked and cannot be changed.

Icon autofill

App icon will autofill.

Icon pull-down gesture

Open apps on the home screen with one hand.

Double tap to lock

Double tap on the blank area of the Home screen to turn the screen off and lock the device.

Swipe down on home screen

Chose to notification drawer or Global search.

App animation speed

Adjust the speed of app startup and closing animations.

Show app suggestions

When enabled, phone will show app suggestions.

Add apps to Home Screen

When enabled, newly download apps will be added to the home sreen.

Raise to wake

When enabled, phone will raise to wake.

Double-tap to wake or turn off screen

When enabled, phone will support double-tap to wake or turn off screen.

Lock screen shortcuts

Swipe on the shortcuts at bottom of the Lock screen to open app or feature.

Recent tasks manager

Display & brightness

There are two modes here, including **Light** and **Dark mode**.

You can choose the **Auto switch**, and the Dark mode will replace Light mode at sunset.

Dark mode

Go to Settings > Display & brightness > Dark > Dark mode settings.

There are three different styles, including enhanced, medium, and gentle.

You can make custom adjustments here, for example, adjusting wallpapers or icons to Dark mode or not.

Auto Brightness

When enabled, the phone will optimize the screen brightness setting according to ambient light conditions. You can also manually adjust the slider bar below to set your preferences.

Screen color mode

There are several different modes here.

1. Vivid mode: Enhanced color
2. Natural mode: Softer color display.
3. Screen color temperatures: Cool, default, Warm

Eye Comfort

You can set the Color effect and Black and white effect to fit more reading scenario. Black and white effect is for purely words and Color is for comfortable color reading.

Video color enhancer

SDR-to-HDR technology widens the color gamut for a superb visual experience. This will increase battery usage.

Auto-rotate

If enabled, the phone display will automatically rotate as the phone rotates.

Auto Screen off

You can choose the length of time the screen will automatically go off here.

Screen refresh rate

A higher refresh rate produces a smoother display effect but uses more battery power.

Screen display

Front camera display by app and full screen display by app

Sound & Vibration

Go to **Settings** > **Sound & Vibration** to change the sound settings on your device.

Live Caption

Automatically caption speech.

Silent mode

Turn off notifications and ringtones at same time

Do Not Disturb

When Do Not Disturb mode is turned on, your phone will not show new or existing notifications or make a sound or vibrate. Notifications will not appear when you swipe down from the top of your screen.

Note that critical notifications for phone activity and status will still appear. You can allow exception below.

- **Schedule:** Set **Do not disturb** duration or set the time to automatically turn on and off.
- **Exceptions:** Choose special settings for notifications, messages, calls, ring for repeated calls and silence media when Do Not Disturb is on.

Volume

- **Media:** Adjust the slider to set the volume for playing music, video and more.
- **Ringtone:** Adjust the slider to set the ringtone volume for phone calls and other notifications.
- **Notifications:** Adjust the slider to set the notification volume for phone calls and other media notifications.
- **Alarm:** Adjust the slider to set the ringtone volume for alarms.

Ringtone

Set the ringtone and vibration for incoming phone calls.

Notification sound

Set the Tone tunes and alert tunes for other notifications.

Vibrate on ring

Vibrate on ring (on/off)

Vibrate on silent

Vibrate on silent (on/off)

Haptics and tones

System haptics: Get haptic feedback for touches, swipes, and more.

Haptic intensity

SOUNDS: If you need to turn off the system sound, you can do so here.

- Dial pad tone
- Lock screen sound
- Screenshot sound
- Deletion sound
- Touch sounds

Dirac audio tuner

Smart, movie, game, music

Advanced settings

Volume button function: **Sound & vibration > Advanced settings > Volume button function**. When you press the volume adjustment button, the selected option will change accordingly. You can choose **media volume** or **ringtone volume** based on your preference

Default recorder: Auto select/Add-on.

Notifications & status bar

If you want to receive relevant system notifications, you can manage notifications here.

Lock screen

Pull down on lock screen to access notification drawer

Lock screen notifications: Show app and notification content

Wake screen when a notification is received

Banner

Show banner notifications on fullscreen.

Badge

Number: Show a number when there are unread messages

Dot: Show a dot when there are uncleared notifications

Number or dot: Support both number and dot badges

Do not show: Do not show badges

Status bar

You can set the style of the battery and time, enable/disable showing **Battery percentage**, display **Real-time network speed**, time and manage icons in the status bar.

Notification icons: You can change notifications icons status here, “Show icon” , “Shownumber” , and “Do not show” .

Battery style: Vertical, loop, do not show

Battery percentage: Enable to show battery percentage

Status bar icons: Status bar icons are displayed on the status bar at the top of the screen. The icons listed in the table below are the most common ones.

- Real-time network speed.
- Bluetooth
- Ring
- NFC
- Earphones
- Alarm

- Data saving
- High performance mode
- Do Not Disturb
- VPN

More settings

Display data usage in notification drawer

Allow notification snoozing

Reduce notification feedback on full screen: Soften notification sounds and reduce vibration intensity when your device is in full screen mode

Buddles

Enhanced notifications: Get suggested actions, replies, and more

At a glance : Calendar events, reminders, whether

Notification history: Off or on

APP notifications

Manage your app notifications

Password & security

Go to **Settings** > **Password & Security** to set up fingerprints, faces and passwords for your phone

Lock screen Password

Your Lock screen password cannot be retrieved if you forget it and you will no longer be able to unlock your phone or view phone data. Do your best to remember it

Set privacy password

The privacy password will be used for verification in features such as App lock.

Select password type: You can choose different ways to set your lock screen password, including pattern, 4-digits, 4-16 digits and alphanumeric characters.

Fingerprint

You can add/delete fingerprints and set fingerprint preferences through **Fingerprint**.

- **Add fingerprint:** Follow the on-screen prompts to add your fingerprint.
 - Add only one fingerprint information at a time.
 - Press firmly on the fingerprint to ensure your fingerprint data is fully added.

Face

You can add/delete face data and set face unlock preferences through **Face**.

- **Add face data:** Follow the on-screen prompts to add your face data.
 - *Do so in a bright environment and ensure that you are facing your phone for the best results.
- **Face Unlock:** Enable this to use face unlock to unlock your phone from the lock screen.
- **Face unlock assistive lighting:** In situation where the camera cannot recognize your face, the screen will light up to help the camera recognize you.

Privacy password

Lockbox and hidden collection have been merged into a new feature called private safe so you can store important data together. Any data stored will be encrypted and restricted from access by third-party apps.

Manage passwords

Manage passwords for third-party apps

System security

Google play protect: Play protect regularly checks your apps and device for harmful behavior. You will be notified of any security risks found

Security update

Find my device: Help you locate your device remotely and keeps your data safe if the device is lost.

Smart lock: Keep your device unlocked when it's safe with you. Smart lock can do this by recognizing signals like when your device is in your pocket or near your home.

Installation sources: use to enable to install app from third-party apps

Device admin apps: This feature grants system permissions that pose a greater security risk. please proceed with caution and only activate if necessary.

Credential storage: Trusted certificates, user credentials, install certificates from storage, remove all user certificates.

Trust agents

Screen pinning: screen pinning allows you to lock the screen to a single app and will affect functions such as incoming calls and alarms. Screen pinning is unavailable if 'navigation gestures' is turned on.

Privacy

Privacy dashboard

Display the mobile phone permission board

Permission manager

Set app permissions to use microphone, camera, contacts, calendar and more.

Camera access

When this is off, all apps and services will not be able to use the camera.

Microphone access

When this is off, all apps and services will not be able to use the microphone.

Privacy protection

- **App lock:** You can add the apps that you want to lock with a password.
- **Hide apps:** “Settings>Privacy>Hide apps” , Tap “Set up” to verify your identify and set up a privacy password and access code for accessing hidden apps.
- **Private Safe:** Collect your information as well as obtain the following permissions during use: access the network and read, write, or delete storage data. For details, refer to the Privacy Notice.

Show passwords

Enable this to display characters as you type and briefly convert them to an encrypted asterisk "*".

Experience improvement programs

OnePlus notifications: Receive official OnePlus news, product information, questionnaires, and recommendations/coupons.

User Experience Program: Allow OnePlus to anonymously analyze general statistical data about phone usage to improve product design and user experience.

System stability improvement program: Allow OnePlus to access system logs anonymously. In the event of an error, allow a bug report with logs to be submitted which will only be use for system error analysis and stability improvements.

OnePlus Service Messaging: Allow OnePlus to deliver prompt cloud messaging services to ensure an optimized product experience.

Advanced

Android System Intelligence: Get suggestion based on the people, apps, and content you interact with.

Autofill service from Google: Saved passwords, credit cards, addresses.

Google location history: Saves where you go with your device.

Activity controls: Choose the activities and info you allow Google to save

Ads: Advertising ID and personalization

Usage & diagnostic: Share data to help improve Android.

Alert me when apps read clipboard

Allowing apps to read your clipboard may cause privacy leaks.
(Alert me when apps read clipboard: on/off)

Safety & emergency

Emergency contacts

In an emergency, use the emergency call feature to instantly call your emergency contacts for help

Medical info

Add your medical information to give first responders the critical information they need.

Emergency call & message

Emergency call quick access: When enabled, press the power button 5 times in a row to make an emergency call.

Auto call emergency services: When enabled, automatically call your default emergency service number 3 seconds after you trigger emergency SOS.

Auto send SMS with location: When enabled, Auto send SOS messages with your current location info to the emergency contact you just called.

About: About “auto send location via SMS”

Google play services

Regularly checks your apps and device for harmful behavior. You'll be notified of any security risks found.

Emergency Location Service: Send ELS Location

Wireless Emergency alerts: Allow alerts including Alerts options and Alert preferences.

Emergency alert history

Battery

Go to **Settings** > **Battery** to view battery details and set battery preferences.

Save power

Optimize battery life by turning off some apps.

Power saving mode

Enable this to extend battery life. Battery saver will turn off some device features and restrict apps.

You can choose to manually turn it on or select Turn off when fully charged.

Advanced settings

High performance mode: The system always operates in a high-performance mode, but it will increase extra power consumption.

Optimize battery use: Automatically optimize apps that are draining battery in background.

Sleep standby optimization: Your device consumes less power and reduces notifications when you are asleep.

Optimized night charging: To reduce battery aging, your phone learns from your daily charging routine so it can control the charging speed at night and avoid overcharging.

Apps

Go to **Settings** > **Apps** to manage your device's apps, change their settings, view app info, set notifications and permissions, and more.

App management

You can check out the apps already installed on your phone here.

Default apps

Set the default apps for home, browser, phone, SMS, gallery, mail, and more.

Disabled apps

Special app access

You can modify system settings, device & app notifications, usage access, all files access, Wi-Fi control and media management apps.

Auto-launch

When this button is off, the settings below will save power. When this button is on, the settings below will ensure that you can continue receiving messages normally.

Display over other apps

You can go to **Settings > Apps > App cloner** to view and configure supported apps. When you open the specified application in **Display over other apps**, the app will create a picture-in-picture window when you open or leave the application (such as continue to watch video), which displays on top of the other apps you are currently using.

* This function needs to be supported by the application itself.

App Cloner

Create a new copy for the application to login to different accounts.

Settings > Apps > App Cloner. The list will show you the applications that supports App cloner. Tap the application to open App cloner.

Spilt screen

When enabled, you can swipe up with 3 fingers to enter the spilt screen mode

Location

Enable this to allow apps to use location information.

Wi-Fi and Bluetooth scanning

Allow apps and services to scan for Wi-Fi and nearby devices at any time.

*Location may use sources like GPS, Wi-Fi, mobile networks, and sensors to help estimate your device's location. Google may collect anonymous location data to improve location accuracy and location-based services.

Recent location requests

Allow you to find apps request for location permission

Google location accuracy

Google' s location service improves location accuracy by using Wi-Fi, mobile networks, and sensors to help estimate your location. Google may collect location data periodically and use this data in an anonymous way to improve location accuracy and location-based services.

Google location history

Allow you to find the history of google location feature used.

Google location sharing

Share your location with friends in real time

Special features

Split screen

Display two apps on the screen for easier multitasking

OnePlus Shelf

Add widgets and get info on weather, steps taken, and more.

Work Life Balance

Strike the balance between your personal and professional life.

Scout

Unlock a smarter search for in-depth results across apps.

Digital Wellbeing & parental controls

Your Digital wellbeing tools

Today: Show today's screen wake up times.

Unlocks: Show today's device unlock times.

Notifications: Show today's notifications received times.

Ways to disconnect:

- **Dashboard:** Manage the dashboard by screen time, Notifications received and Apps times opened. Click the icons on the right of the Apps name to set app timer, once ran out, the app will be paused for the rest of the day, it will pop-up a window shows "App paused, your App timer ran out. It'll start again tomorrow." . You can click "Settings" on the pop-up window to delete the timer.
- **Bedtime mode:** Use **Bedtime mode** to disconnect from your phone and avoid interruptions while you sleep. When it starts, Grayscale removes the screen's color, do not disturb mode will mute sounds so you aren't woken up by calls or notifications. When it ends, your phone changes back to its usual settings.
- **Focus mode:** Set to pause distracting apps when you need time to focus.

Reduce interruptions:

- **Manage notifications:** Disable or enable app's notifications.
- **Do Not Disturb:** Please refer [Do Not Disturb](#) for settings.
- **Heads up :** If you're walking while using your phone, get a reminder to focus on what's around you. Use with caution. Heads Up doesn't replace paying attention.

■ **Permissions:** Physical activity and location (optional)

● **Show icon in the app list (on/off)**

Parental controls

Add content restrictions and set other limits to help children balance their screen time.

System settings

System Navigation

The device supports two types of navigation

Go to **Settings > System settings > System Navigation**, choose **Gestures** or **Buttons**.

Language

Set your system language and input method.

Languages: Set your system language.

- Tap **Add a language** to add language.
- Press and drag the selected language to the top of the list to set the language to the system language.

Keyboard & input method

You can set your preferred keyboard here.

- Gboard: multilingual typing
- **Google voice typing:** Enable this feature to enable you to enter text by voice. You can set the language using the following path :

Go to Keyboard & input method > Google voice typing > languages.

Note: manage keyboard also could adjust **Gboard** and **Google voice typing**.

Keyboard settings:

- Keyboard location (default/hide)
- Mistouch prevention: Swiping on the left or right edges of the keyboard will not return you to the previous page.

Input assistance:

- Autofill service: Enable this to automatically fill in saved data when you browse the web or enter your account password or in other scenarios. This function will require additional apps to be installed.
- Personal dictionary

Date & time

Set system date and time.

- **Time zone:** Set the system time zone manually.
- **24-hour format:** Enable this for the system time to be in the 24-hour format or disable it to use the 12-hour format.

- **Set time automatically**
- **Set time zone automatically**

Accessibility

The accessibility is optimized for the operation experience of visually impaired users, so that visually impaired users can use the phone smoothly.

Go to Settings> System Settings> Accessibility

General

Convenience tools:

- Press Power button to end calls
- Accessibility menu: Show frequently used functions in a large menu.
- Accessibility button: Quickly access accessibility features from any screen.
- Shortcut from Lock screen: Allow accessibility function shortcuts to be accessed from the Lock screen.

Vision

- TalkBack

When TalkBack is turned on, it will provide you with voice feedback so that you don't need to look at the screen while using the device. This feature is very useful for the blind and those with low vision.

- Select to speak

When select to speak is enabled, you can click on certain items on the screen and the system will read them aloud.

- Text to speech settings

You can customize the text-to-speech output.

You can also choose the language (temporarily support Chinese and English), speed and pitch according to your usage habits.

Magnification: quickly zoom in on the screen to display content more clearly.

Other functions: Color correlation, high contrast text, remove animations and color inversion.

Hearing

- Live Caption: Automatically caption media
- Caption preferences

Live Caption detects speech in media and automatically generates captions.

- Mono audio

Merges channels when playing audio.

- Channel volume balancing

Interaction

- Touch & hold delay (short/medium/long)
- Time to take action: Choose how long to show messages that

ask you to take action, but are visible only temporarily.

- Vibration & haptics: Ring vibration, notification vibration, touch feedback.
- Switch access: Let people with motor impairments control phones and tablets using one or more switches. Use switches to select items, scroll, enter text, and more.
- Large mouse pointer (on/off)
- Click when pointer stops: When a mouse is connected, you can set the mouse cursor to click automatically when it stops moving for a certain amount of time.

One-handed mode

Swipe down from the bottom of the screen to enter One-handed mode. Swipe up or tap the area at the top of the screen to exit. This feature works only when navigation gestures are enabled.

Gestures & motions:

Allow to manage notifications. Requires the following permissions to allow you to use gestures to control phone calls: read contacts, make phone calls, and access storage data.

- Screen-off gestures

You can set double-tap to wake or turn off screen, draw an O to open camera, draw a V to turn on/off flashlight, music control, add gesture

- Swipe down with 3 fingers to take screenshot

- Touch and hold with 3 fingers to take screenshot
- Raise to wake
- Lift to ear to answer calls
- Auto switch to receiver

Automatically switch to the receiver when you lift your phone to your ear

- Flip to mute incoming calls

Power button

Double click the power button

Set whether pressing the power button twice will turn on the camera.

Press and hold the power button

- Press and hold the power button to turn on the device when the device is off.
- Press and hold the power button for Voice Assistant when the device is on, and it can also be changed to “power menu” .

Screenshot

You can turn off or on delete the original image after editing; you can turn off the screenshot sound and change the position of the preview window here.

There are three methods to get a screenshot.

- **3-finger swipe down**

- **3-finger touch and hold:** Touch and hold with 3 fingers and then drag on the screen to select the region you want to capture.
- **Power and Volume Down buttons:** press the Power button and the Volume Down button at the same time.
- **Tutorial**
- **Delete original image after editing**
- **Screenshot sound (on/off)**
- **Preview window location :** left and right

Screen recording

- **SOUND**

Record system sound

Record microphone sound.

- **PICTURE**

Definition

Frame rate

- **OTHER**

Record front camera video

Show screen touches

Video coding format

About

Scheduled power on/off

For the convenience of users, the time switch on/off function is built in. You can go to **Settings > System settings > Scheduled power on/off** to set this function.

Power menu

Show smart devices: control linked smart devices from one place.

When the device is locked, you can choose to show sensitive content or not.

OTG connection

Transfer data via OTG. Automatically turns off after 10 minutes of inactivity.

RAM Boost

Optimize RAM utilization based on your usage.

Back up and reset

- Back up & migrate: Back up data to or restore data from a local storage.
- Google Backup: Using google to backup data.
- Reset phone : Reset network settings, reset all settings, erase contacts and call logs on this phone, erase all data.

Users & accounts

Passwords & Accounts

OnePlus account

Other accounts

- **Add account:** Share the device with other people by creating additional users.

About Device

View basic phone information, system version, and more in the **About device** option.

Up to date

Tap to update to official version once available

Device name

Tap to edit the device name.

Storage

Apps storage.

Processor

Processor of the device

Model

Model name of the device

RAM

When enough storage space is available, you can use part of it to expand your RAM.

Android version

Show Android version and Android security update.

Status

Tap to view the phone number, signal, etc.

Version

This shows the baseband & kernel version.

Legal information

Tap to view user agreement, privacy notice, open source licenses, google legal, google play system update licenses, health & safety information

Award

Tap to view OxygenOS Contributors.

Network Unlock

Unlock your device's networks and services between different carriers

Google

Manage your Google account.

Sign in to your google account

Services on this devices

Ads, autofill, backup, devices & sharing, find my device, mobile data & messaging, parental controls, personalize using shared data, set up & restore, settings for google apps.

Tips & Support

Tips and Support provides tips and FAQ on device usage.

Apps

Learn about the apps on your OnePlus device.

Phone

Dialing

- Method 1: Tap the keypad (dial pad) button, enter the contact number, and press the call button to dial the number.
- Method 2: Browse your contacts or call logs, and tap the number to dial it.
- Answer or refuse incoming calls: Swipe up to reject a call or swipe down to accept it.
- Incoming call during normal use: The green button is to accept the call and red is to reject it.

Call screen

After accepting a call, the interface functions are as follows:

- **Speaker:** Enables loud speaker mode during call.
- **Keypad:** Opens the dial pad.
- **Mute:** Mutes the microphone.
- **Add call:** Adds multiple calls.

- **Hold:** Allows you to answer a new call by putting the current call on hold and then resume the current call when the new call ends.
- Contacts
- Video
- Notes

Settings

Tap the menu button in the upper right corner to start settings.

Accessibility: Set TTY mode and hearing aids compatibility.

Calls

- Reject with SMS
- Speed dial
- Answer/End call: Auto answer calls when connected to external audio device, Press Power button to end call, Vibrate when call is answered/ended, Swipe up to answer.
- Incoming call style on unlocked screen
- Block & filter
- Advanced settings

Contacts

Contacts has following functions: Edit, delete, search, manage blocked numbers and more.

Add a contact

1. Enter Contacts
2. Tap “+” to create new contact
3. Enter contact information
4. Tap “√” in the upper right corner to save it

My Files

In My Files you can quickly access and manage a variety of files. Enter the application drawer and open the My Files application.

Phone Storage: View and manage folders and documents stored on your phone and your cloud drive.

Private Safe

Favorites

Recently deleted

My Files: Check files by file category, including Documents, Apks, Archives, Photos, Videos, Audio and so on.

Recents: Files added in the last 30 days are shown here.

Device Storage

Search file: Tap  and then enter key words to find your files.

Messages

Send, receive, and view Messages through the Messages app.

Send message

1. Open the Messages application.
2. Tap the button in the lower right corner.
3. Select recipient.
4. Enter SMS content.
5. Tap the send icon in the lower right corner to send a message.

View and reply message

Messages are sorted by time.

1. Open the Messages app.
2. Select the message you want to view from the list.
3. If you want to reply to a message, enter the message in the text box at the bottom of the screen, and then tap the send icon on the right to send it.

Message settings

Tap the menu button in the upper right corner and select Settings. Message settings include Chat features, Notifications,

Bubbles, Hear outgoing message sounds, Your current country, Automatic previews, Spam protection, Advanced and About, Terms & privacy.


Enter advanced settings to reach Group messaging, Auto-download MMS when roaming, Use simple characters, Get SMS delivery reports, Wireless emergency alerts and more.

Weather

Provides the weather forecast and early warning function.

- **Check the weather: Open the app drawer and open the Weather app**

Provides information on weather, temperature, the following 15 days of weather, the following 24 hours of weather, wind direction, body temperature, humidity, visibility, pressure and more.

- **Add city:** Tap “

- **Switch city:** Swipe left and right to switch between cities.

- **Settings**

Tap the menu button in the upper right corner and select **Settings**.

- **Weather alert:** Enable this to receive weather notifications.

- **Temperature:** Select the temperature unit – Celsius or Fahrenheit.
- **Wind:** Select the wind unit, like Meters per second – m/s, Kilometers per hour – km/h, Feet per second ft/s, Miles per hour- mph, Nautical miles per hour – kts.
- **Precipitation:** Select units of precipitation, Millimeters – mm, Inches – in.
- **Visibility:** Select units of visibility, Kilometers – km/ Miles – mi.
- **Pressure:** Choose the unit of pressure, Hectopascals – hPa, Millimeters of mercury -mmHg, Inches of mercury – inHg.
- **Rate Our App:** OnePlus Weather
- **About**

Calculator

Calculator provides common calculator functions.

Enter the application drawer and open the Calculator app.

- **Basic Calculator:** The calculator provides a basic calculation mode by default, which can perform simple addition, subtraction, multiplication and division calculations.
- **Scientific Calculator:** Tap the spread icon on the left bottom corner to enter scientific mode.




- **View history:** Swipe down to view history, and tap the CLEAR button in the upper right corner to clear it.

Recorder

Recorder provides recording and playback functions.

Enter the application drawer and open the Recorder app.

- **Record:**



- **Start recording:** Tap  to start recording.
- **Pause the recording:** Tap  to pause a recording.
- **Insert tags:** Tap  to insert tags.

- **Recording playback and management:**

- Enter the recording file list.
- Play recording: Tap the recording to play.
- Delete recording: Long press the recording that needs to be deleted and tap the delete button.

Notes

Sticky notes let you to take quick notes and edit text and pictures.

- **Add note:** Tap  to add a note. Supports adding text, album pictures, photos, voice recognition, doodles, notebook, to-do list. Allows to delete notes, set reminders, etc.
- **Change the text styles:** Tap the **“Aa”** icon to change the style of your texts.
- **Search notes:** Tap  and enter the keywords to search.
- **Delete a note:** Long press the note that you want to delete and tap the "delete" button.
- **Share a note:** Open the note you want to share, tap the share button in the upper right corner, select the sharing method, and then press the page prompt to complete the sharing.
- **Add reminders to your notes:** Open the note and tap the menu icon in the top bar, then select reminder to set the date and time for the reminder.

Photos

All images and videos are saved by default in the Photos app, which includes albums, recently deleted photos, and photo editing functions.

- **Photos:** Photos and videos are displayed in a timeline list view.
- **Albums:** Automatically categorize photos or videos in an album.

- **Explore:** This includes Smart category feature and Story function. Smart category will categorize photos by “people” , “places” and “things” and other standards. Story feature will create personal videos automatically based on specific photos.

Clock

Alarm

- **Add alarm clock:** Tap the "+" button below to add and set a new alarm.
- **Alarm clock time:** Drag the dot in the dial to set the hours. Drag it again to set the minutes.
- Tap the keyboard icon on the middle right to switch to the numeric keyboard to input the time.
- Repeat: You can choose Monday to Sunday. Tap the downward arrow on the right to enter the calendar for custom selection.
- Alarm Ringtone: Select the alarm clock ringtone from system ringtones or local storage.
- Vibrate: When the alarm clock rings, the phone will vibrate at the same time.
- Label: An alarm note will be displayed on the screen when it rings.

- **Delete alarm:** Long press the alarm you want to delete and tap “Delete” .

World Clock



Add region: Tap the globe icon at the bottom of the screen to check and select the cities from the list.

- **Weather:** The weather will be showed when you tap on the city name.

Timer

- **Add countdown:** After entering the minutes and seconds, press the start button to start the countdown.

After starting a countdown, you can select the button in the lower right corner to add another countdown. (Swipe up/down to view other timers)


- **Delete countdown:** Tap  to delete a specific countdown time.
- **Pause:** Tap  to pause a countdown.
- **Label:** Tap “Add Label” to input whatever you want to rename it.

Stopwatch

Start: Tap  to start the timer.

Pause: Tap  to pause the timer.

Mark: Tap  to mark.

Share: Tap  to share the timer.

Zen Mode

Zen Mode allows you to put the phone down and enjoy your life just yourself or with others you like. Once started, it can't be canceled, and incoming notifications will be temporarily muted. Applications except camera will be locked, but you can still receive phone calls and use the emergency call.

- Turn on Zen Mode

There are two ways to turn on Zen Mode.

1. Pull the notification panel down > tap Zen Mode.
2. Zen Mode can be dragged to the desktop and turned into an icon.

* Zen Mode can be uninstalled.

In Zen Mode > tap the time > set the duration > Swipe left or right to switch between different themes > tap the button below to start.

- Set Zen Mode: Enter Zen Mode > tap profile icon in the top right corner and then tap settings icon. Set the theme sounds, daily reminder, notification and more.
- Group-Zen: You can create a room, and share to friends by SNS. It is not limited to OnePlus.

Google Apps

Enjoy applications powered by Google. Visit [Google.com](https://www.google.com) to learn more.

Google

Find online content with tools that learn what you are interested in. Turn on your personalized feed to receive customized content.

Chrome

Browse the Internet with Chrome and bring your open tabs, bookmarks, and address bar data from your computer to your mobile device.

Gmail

Send and receive email with Google's web-based email service.

Maps

Get directions and other location-based information. You must enable location services to use Google Maps.

YouTube

Watch and upload videos from your device.

Drive

Open, view, and share files saved to your Google Drive cloud account.

Duo

A video calling app that allows you to connect with the people who matters most.

Photos

Store and back up your photos and videos automatically to your Google Account with Google Photos.

YouTube Music

A new music app by Google that allows you to easily find the songs and videos you' re looking for and to discover new music.

Files

Files is a file management app for file browsing and transfer.

Calendar

Google Calendar is an app for time management and schedule.

Assistant

Google assistant is an artificial intelligent assistant. Refer to "Google Assistant" for more details.

Play Store

Play store is an online application store, you can install applications you need here.

Reboot, Update, Backup, Recovery

Learn to upgrade and reset your OnePlus device

Reboot or force reboot

Most issues can be resolved by rebooting your device in the following two ways:

1. When powered on, press power button and volume up button simultaneously, and then tap "Restart" to reboot the device.
2. When powered on, long press the power button and volume up button for 10 seconds, the phone will shut down, and then press the power button to turn on the device again.

System updates

1. **Settings > About device > Up to date** Then the system starts to check for updates.

2. Follow the instructions to download and update.

* If your device is up to date, you will not see the instructions.

Back up and Reset

You can go to **Settings>System Settings > Backup and Reset** to create a backup or recovery when needed.

● Use Google drive for backup and recovery.

➤ Create backup

1. Access **Settings > Accounts**, login **Google account and enable Account sync**.
2. Wait for the system to complete synchronization automatically.
3. Use the Wi-Fi network to back up your device as the data size may be too large to back up using mobile data.

➤ Restore Backup

After a factory reset or when you switch to a new device, log in to your Google account on the device and enable Account sync to restore the data on the phone.

Reset phone

Note:

1. Restoring factory settings will reset Wi-Fi, Bluetooth, and mobile network settings. Backup important data before a factory reset.

2. If "Erase all data" is enabled, ensure that all important files, such as photos and documents in the phone and local backup, have first been copied to another device.

Operating guidelines:

1. **Settings > System settings > Back up and reset > Reset phone**
2. Tap **Reset phone**
3. Enter passcode (If passcode is enabled)
4. Wait till the factory reset is complete

Accessibility

Learn about Special features that make using the device easier for people with physical disabilities.

Press power button to end calls

Go to **Settings > System settings > Accessibility > General** and then enable “Press power button to end calls” . This allows you to end a call by simply pressing the power button.

Magnification

Go to **Settings > System settings > Accessibility > Vision > Magnification > Magnification shortcut**.

To zoom in:

1. Use the preset shortcut to start magnification.
2. Tap the screen.
3. Drag with two fingers to move around the screen.
4. Pinch in or out with two fingers to adjust zoom.
5. Use the shortcut again to stop magnification.

To zoom in temporarily

1. Use the preset shortcut to start magnification.

2. Touch and hold anywhere on the screen.
3. Drag your finger to move around the screen.
4. Lift your finger to stop magnification.

Note:

You can't use zoom function on the keyboard or navigation bar.

Color inversion

Go to **Settings > System settings > Accessibility > Vision** and enable "Color inversion" to invert the display colors.

High contrast text

Go to **Settings > System settings > Accessibility > Vision > High contrast text**. Enable this function to increase the contrast with background.

Safety information

View Safety information for your device.

Legal Notice

Declaration


Without prior written permission of OnePlus, reproduction, transfer, distribution or storage of the contents in this document in any form is prohibited. OnePlus operates a policy of ongoing development. Thus, OnePlus reserves the right to make changes or improvements to any of the products described in this document without prior notice. The contents of this document are all provided “as is” . Except as required by applicable law, no warranties of any kind, either express or implied, are made in relation to the accuracy of this document. To the maximum extent permitted by applicable law, under no circumstances shall OnePlus or any of its licensors be responsible for any loss of data or incur any special, incidental, consequential, or indirect damages caused.

Availability of product supplies, application software, and accessories may vary. For detailed information, please refer to an authorized OnePlus distributor.

This device may contain commodities, technology, or software subject to export laws and regulations.

Diversion contrary to law is prohibited.

Trademarks and Permissions

ONEPLUS and  are trademarks or registered trademarks of OnePlus Technology (Shenzhen) Co., Ltd. All rights reserved. Android™ is a trademark of Google Inc. LTE is a trade mark of ETSI. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.



The N-Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.

Other trademarks, product, service and company names mentioned may be the property of their respective owners.

Privacy Policy

OnePlus is constantly striving to protect your personal information. To better understand how we protect your personal information, you can read our "Privacy Policy" in the Setup Wizard when you turn on your phone for the first time. You can also check our "Privacy Policy" by following the steps: Settings > About device > Legal Information > Privacy Policy.

Precautions for using the device

Please read all the safety and health information carefully before using your device to ensure its safe and proper operation.

General Safety Information

Failure to follow these guidelines may cause harm to your device, property, yourself, or others.

- Do not switch on the device where prohibited or when it may cause interference or danger.
- Do not use device at gas stations, service stations, or near fuel or chemicals.

- Please do not store or carry your mobile phone or accessories near liquid or flammable gas.
- Do not place the phone near magnetic cards or other magnetic objects, since information stored on floppy discs, memory cards and credit cards could be damaged by magnetic radiation.
- Do not place the battery, phone or charger in a microwave oven or other high voltage equipment. Otherwise, it may cause circuit damage, fires, or other damage.
- Do not disassemble or open, crush, bend or deform, puncture, or shred.
- All wireless devices, including mobile phones, might be susceptible to interference, and it can also cause interference. Please check all laws and regulations when using your mobile phone, especially in airplanes, hospitals or medical institutions.
- Only use branded accessories and batteries that are approved by OnePlus. Accessories which are not approved by OnePlus may damage the phone or

violate local regulations for radio devices. OnePlus will not take any responsibility for accidents or problems caused by using accessories that are not approved by OnePlus.

- The device is designed for water resistance under certain conditions, but OnePlus does not recommend excessive submersion. Liquid damage will void the warranty.
- When connecting with other devices, please follow the safety guidelines presented in this manual. Do not attempt to connect your device with incompatible products.
- Please do not use the phone if antenna is damaged. Otherwise, it could cause injury.
- Please keep metallic objects away from phone receiver. Small metallic objects may be attracted to the device and personal injury or device damage could occur.

- Keep a minimum distance of 15 cm between a wireless device and an electronic implant (pacemaker, insulin pumps, neurostimulators, etc).
- Keep the device away from the belly of pregnant women.
- Keep the device away from the lower abdomen of adolescents.
- Children and adolescents should make reasonable use of the phone. Avoid night communications and limit the frequency and duration of calls.
- Only connect to power sources with USB 2.0 or above.
- To reduce the level of exposure to radiation, you should use the mobile telephone proximity to the network tower or use of accessories (hands-free kit etc) or use loudspeaker if suitable; use the device under good reception conditions (when the signal indicator displays a full signal on the signal reception bar) can reduce the amount of radiation received;

giving priority to the use of data, SMS and MMS messages rather than calls.

- If your device support wireless charger and when using it as a wireless charger it is intended for use as a desktop device and should not be carried when in this mode. To comply with RF exposure requirements when using in the wireless charging mode please place the device at a minimum distance of 10cm from your body.

Battery Safety

- Please do not attempt to repair, disassemble or modify the battery. Replacing battery by an incorrect type could lead to explosion. Your phone can only use OnePlus authorized batteries.
- Do not place or use battery near fires, heaters, direct sunlight, or other heat sources. Prolonged exposure to heat may cause battery leakage, explosions, or fires.

- Please do not place pressure on or pierce the battery with hard objects. Damaging the battery could cause battery leakage, overheating, or fires.
- Do not short-circuit a battery or allow metallic or conductive objects to contact the battery terminals.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- If you experience any battery abnormalities, such as high temperature, discoloration, distortion, or leakage, immediately discontinue usage of the device and contact customer support.
- All batteries have a limited lifespan and will begin to lose capacity after several hundred charges/discharges.
- Do not dispose of the battery as household waste. Refer to local regulations.

Charging Safety

- The charger is intended for indoor use only.
- Do not charge the battery under the following conditions: in direct sunlight, in temperatures below 5°C; in areas with humidity, dust or strong vibrations; in areas near a TV, radio or other electrical appliances.
- The charger shall be installed near the equipment and shall be easily accessible.
- The maximum ambient charging temperature of the equipment declared by manufacturer is 35°C.
- Sockets that are dirty may cause poor contact with the charger and your phone may fail to charge properly.
- Please only use the official OnePlus charger. Using unauthorized chargers can be dangerous and can void your warranty.
- Make sure to only use outlets with the correct voltages (as labeled on the charging brick). Using an

incorrect voltage can damage your phone and/or battery and lead to injury.

- Do not use unsafe plugs or outlets.
- Do not use a short-circuit charger.
- Do not connect your device to a high-voltage power supply or the battery could become damaged.
- Do not disassemble or modify charger, as this may lead to personal injury, electric shock or fire.
- Do not touch the charger, cable or power socket with wet hands, as this may cause electric shock.
- Do not place heavy objects on the power cord or attempt to modify any cables.
- Make sure to grasp the charger firmly while unplugging it.
- Do not pull the power cord as this may lead to damage and cause electric shock or fire.
- Before cleaning the device, unplug the power plug from the socket.

- Unplug the charger from electrical outlets and the device when not in use.

Driving Safety

- Do not use the device and safety should take priority when you are operating a vehicle. Be sure to obey related regulations in the area or country in where you drive.
- Do not place your phone or accessories near safety air bags.
- Compass and GPS information are only used for reference purposes.
- If you do not wish to disclose your location, be sure not to use applications that can record your location.

Health Information



- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- Damage to the display or battery could lead to leakage of the liquid. If this liquid comes in contact

with your eyes, skin or clothes, immediately rinse your eyes (do not rub) or wash skin with water thoroughly and seek medical attention.

- Some people may get dizzy or experience medical problems in response to flashing lights. If you are at risk, please consult your doctor before using this device. If you have the following symptoms: headache, dizziness, convulsion, eyes or muscle cramps, loss of consciousness, or involuntary body movements, please stop using the device immediately and seek medical attention. Avoid using the device for extended periods and keep proper distance from your eyes.

Laser Safety Statement

If this product supports the laser auto-focus feature. To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service center. Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous

radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure or make direct contact with the laser.

CLASS 1 LASER PRODUCT

FCC Notice

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference;
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device,

pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful to part interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- **Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- The antenna(s) used for this transmitter must not be collocated or operate in conjunction with any other antenna or transmitter.
- The country code selection is for non-US model only and is not available for all US models. Per FCC regulation, all Wi-Fi products marketed in US must be fixed to US operation channels only.

RF Exposure Information (SAR)

- This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.
- During SAR testing, this device was set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that

simulate RF exposure in usage against the head with no separation, and near the body with the distance of 15 mm. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

- The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate, or SAR.

The SAR limit set by the FCC is 1.6 W/kg.

This device complies with SAR for general population /uncontrolled exposure limits in ANSI/IEEE C95.1-1992 and has been tested in accordance with the measurement methods and procedures specified in IEEE1528.

- The FCC has granted an Equipment Authorization for this model device with all reported SAR levels

evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: 2ABZ2-AA272.

For this device, the highest reported SAR value for usage against the head is 1.17 W/kg, for usage near the body is 1.07 W/kg.

- While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.
- SAR compliance for body-worn operation is based on a separation distance of 15 mm between the unit and the human body. Carry this device at least 15 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operations, choose a belt clip or case that does not contain metallic components, to maintain a separation of 15 mm between this device and your body. RF exposure compliance with any body-worn accessory, which contains metal, was not

tested and certified, and use such bodyworn accessory should be avoided.

For information about SAR, visit:

- <https://www.fcc.gov/general/radio-frequency-safety-0>
- <https://www.fcc.gov/general/specific-absorption-rate-sar-cellular-telephones>

FCC Hearing Aid Compatibility(HAC) regulations for wireless devices

- Your phone is compliant with the FCC Hearing Aid Compatibility requirements.
- The FCC has adopted HAC rules for digital wireless phones. These rules require certain phone to be tested and rated under the American National Standard Institute (ANSI) C63.19-2011 hearing aid compatibility standards.
- The ANSI standard for hearing aid compatibility contains two types of ratings.

- M-Ratings: Rating for less radio frequency interference to enable acoustic coupling with hearing aids.
- T-Ratings: Rating for inductive coupling with hearing aids in tele-coil mode.
- Not all phones have been rated, a phone is considered hearing aid compatible under FCC rules if it is rated M3 or M4 for acoustic coupling and T3 or T4 for inductive coupling. These ratings are given on a scale from one to four, where four is the most compatible. Your phone meets the M3/T3 level rating.
- However, hearing aid compatibility ratings don't guarantee that interference to your hearing aids won't happen. Results will vary, depending on the level of immunity of your hearing device and the degree of your hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

- This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.
- Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating.

For more information, visit:

<https://www.fcc.gov/consumers/guides/hearing-aid-compatibility-wireline-and-wireless-telephones>

Regulatory

Settings >About device >Regulatory

Care and Maintenance

The following suggestions will help you maintain and prolong the life of your device.

- Only qualified and authorized personnel should make repairs to this product.
- Disabling features such as Bluetooth and Wi-Fi when not in use and dimming the screen can help you save energy and extend battery life.
- Clean your phone and charger with a soft, clean, dry cloth. If the screen comes into contact with liquid or dust, please clean it immediately. Do not use alcohol or irritating chemicals to clean the device.
- Touching the screen with a sharp object may cause the screen to be scratched.
- Please do not touch the connection port of the phone, as static electricity may harm components in the device.

- Ideal operating temperatures are 0°C to 35°C, Ideal storage temperatures are -20°C to +45 °C.
- Only operate your phone between 35% to 85% humidity.
- Do not place the phone on uneven or unstable surfaces.
- Do not hit, press, shake or drop the phone to avoid damage and injury.
- Chargers are not waterproof. Please do not use these devices in the bathroom, areas of high temperature, humidity or dust; please avoid rain.
- When the phone is transmitting data or saving information, do not remove the SIM card.
- Please keep the phone out of reach of children in order to prevent injuries or property damage.

OnePlus Device Warranty Information

OnePlus devices purchased on oneplus.com or authorized sales channels come with a limited

warranty. The duration of this warranty is dependent on the original country or region of purchase and is only redeemable within the original country or region. Unless otherwise specified, this warranty covers the hardware components of the product as originally supplied and does not cover, or partially covers, software, consumable items, or accessories, even if packaged or sold together with the product. The limited warranty only covers functional defects of product caused by workmanship or build materials. For more details, please contact OnePlus Customer Support by visiting oneplus.com/support.

The limited warranty does not cover

1. Defects or damage resulting from accidents, neglect, misuse, or abnormal use; abnormal conditions or improper storage; exposure to liquid, moisture, dampness, sand or dirt; unusual physical, electrical or electromechanical stress.
2. Scratches, dents and cosmetic damage, unless caused by OnePlus.

3. Defects or damage resulting from excessive force or use of metallic objects on the touch screen.

4. Devices that have the serial number or the IMEI number removed, defaced, damaged, altered or made illegible.

5. Ordinary wear and tear.

6. Defects or damage resulting from the use of the product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by OnePlus.

7. Any physical feature defects or damage resulting from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by OnePlus.

8. Defects or damage resulting from external causes such as collision with an object, fire, flooding, dirt, windstorm, lightning, earthquake, exposure to weather conditions, theft, blown fuse, or improper use of any electrical source.

9. Defects or damage resulting from cellular signal reception or transmission, or viruses and 3rd party software problems introduced into the product.

10. Free warranty replacements and repairs are only valid in the country or region of purchase. Please contact OnePlus Customer Support for more details.

Return Policy (Limited to Europe)

OnePlus phones and accessories are made to the highest standards and undergo rigorous testing. If you are not satisfied with your OnePlus product for any reason, you may request a return within 15 calendar days of delivery. Once we approve your return request and receive the product, we will perform standard inspection. And if the product passes the inspection, we will give you a full refund. Any shipping and handling fees incurred in the return process are not covered by the refund.

Return requests made outside of the 15-day period will not be accepted. We may also choose not to accept returns within these circumstances:

1. Defects or damages caused by misuse, neglect, physical damage, tampering, incorrect adjustment, normal wear and tear or incorrect installation after purchase.

2. Price fluctuations being the sole reason for return.

3. Customized customer contracts for UK consumers.

In accordance with the U.K. Consumer Rights Act 2015, any goods that are not (1) of satisfactory quality; (2) fit for their given purpose; or (3) as described, may be returned free of charge within 30 days of delivery. Please submit a ticket describing the problem with your device. In order to be eligible for a refund, you must contact us within 30 days and describe in details how the goods were defective, damaged, or materially different. We may choose not to accept returns for any of the above-mentioned circumstances. In all cases, we will inspect the product and verify the fault. To qualify for a replacement or refund, device must be in “as new” condition and include all original contents of the package. We

reserve the right to refuse a refund or exchange if the product returned is deemed to have been damaged.

This policy is only applicable to the products purchased from OnePlus official website www.oneplus.com or OnePlus Exclusive Store. For any product not purchased from OnePlus official website or OnePlus Exclusive Store, you may refer to the Return Policy of the retailer in question.

Recycling Information

Percentage of Bioplastics and PCR plastics used in the device is 0%.

Please contact OnePlus Customer Support to request a return at oneplus.com/support.

DE

OnePlus Kundenbetreuung

Weitere Informationen finden Sie in unserem Support Center:

www.oneplus.com/de/support

Bedienungsanleitungen im Download:

<https://www.oneplus.com/de/support/manuals>

FR

OnePlus Service Clients

Visitez le site d' assistance en ligne pour obtenir plus d' informations:

www.oneplus.com/fr/support

Téléchargements et Manuels:

<https://www.oneplus.com/fr/support/manuals>

ES

OnePlus Atención al Cliente

Para información, soporte y asistencia vaya a:

www.oneplus.com/es/support

Descarga el manual en:

<https://www.oneplus.com/es/support/manuals>

IT

OnePlus Assistenza Clienti

Per informazioni di supporto e assistenza vai su:

www.oneplus.com/it/support

Scarica manuali:

<https://www.oneplus.com/it/support/manuals>

PT

Suporte ao Cliente OnePlus

Para informações, suporte e assistência, acesse:

www.oneplus.com/pt/support

Descarregar manual:

<https://www.oneplus.com/pt/support/manuals>

SE

OnePlus Kundensupport

För supportinformation och hjälp gå till:

www.oneplus.com/se/support

Ladda ned manualer:

<https://www.oneplus.com/se/support/manuals>

IN

OnePlus Customer Support

Support information and assistance go to:

www.oneplus.in/support

Download manuals:

<https://www.oneplus.in/support/manuals>

NL

OnePlus Klantenservice

Voor ondersteuning bij producten ga je naar:

www.oneplus.com/nl/support

Download handleidingen:

www.oneplus.com/nl/manual

FI

OnePlus asiakaspalvelu

Tuotetuki ja asiakaspalvelu:

www.oneplus.com/fi/support

Lataa käyttöohjeita:

www.oneplus.com/fi/support/manuals

DK

OnePlus kundesupport

For support, information og hjælp, venligst gå til:

www.oneplus.com/dk/support

Download brugsmanual:

<https://www.oneplus.com/dk/support/manuals>

EE

OnePlus klienditugi

Tugiteave ja abi: www.oneplus.com/ee/support

Lae alla käsiraamat:

www.oneplus.com/ee/support/manuals

LT

Pagalba klientams

Eiti į palaikymo informaciją bei pagalbą:

www.oneplus.com/lt/support

Parsisiūsti varototojo vadovą:

www.oneplus.com/lt/support/manuals

RO

Asistență clienți OnePlus

Informații de suport și asistență:

<https://www.oneplus.com/ro/support>

Descărcați manuale:

<https://www.oneplus.com/ro/support/manuals>